



FIRE ALARM INSTRUCTIONS & ZONE CHART FOR DIGITS FAREHAM

INSTRUCTIONS FOR USE OF MANUAL/AUTOMATIC

FIRE ALARM SYSTEM

NORMAL CONDITION

Green " Supply Healthy " LED on.

FIRE CONDITION

1.) Indications

Buzzer pulses. This buzzer can not be silenced until panel is reset. Fire LED on steady. Zonal Fire LED shows Zone & Location of Detector.

2.) Actions

Check location and investigate incident. If detector has operated the LED will be illuminated to indicate its location.

3.) Silence Alarms

Turn the control activate key on, **Press The Silence/Sound Alarms Button.** The alarms will silence and supervisory buzzer on panel will operate steadily.

4.) System Reset.

When smoke is clear from detector or glass replaced in call point with system may be reset. Push " Reset " button.

FAULTS

Faults will be advised by the internal buzzer sounding and the appropriate fault LED will illuminate.

If a fault occurs, Contact Uni-Guard Fire Protection immediately on (023) 9247 0711

TESTING

Should be carried out weekly as per BS 5839 : Part 1:2002

MAINTENANCE

Maintenance should be by:
Uni-Guard Fire Protection.

ZONE 1	CELLAR
ZONE 2	GROUND FLOOR
ZONE 3	FIRST FLOOR
ZONE 4	SECOND FLOOR

Project : **DIGITS**
18 HIGH STREET FAREHAM

Content : FIRE ALARM ZONE PLAN

Drawing No.: UG-1016-ZC

Scale :
NTS

Rev :

Drawn by : AHB
Date : 11.04.2013



Unit 21, The Oakwood Centre
Downley Road, Havant
Hampshire PO9 2NP

Tel : 02392 9247 0711